

## Remote Control Fucking Machine – VF553

### Instructions/Manual:

- A. Parts of the Remote Control Fucking Machine VF553
  1. Main body of VF553
  2. Wireless Remote Controller
  3. Dildo
  4. Adapter
- B. Functions and Technological Parameter
  1. Specified voltage: 110v – 240v, 50hz/60hz
  2. Adapter: Output 12v DC.
  3. Specified power: 33w
  4. Stroke length: 60mm
  5. Speed 50 to 350 times per minute
- C. Installation and Direction
  1. Open the package, take out the main body, thread the dildo clockwise on the connecting screw.
  2. Insert the plug into the outlet, the power the light will light up.
  3. Turn the machine and run before initial use. Make sure the machine is properly working on all speeds before using. Before use make sure that you have used lubrication to avoid injury.
- D. Wireless remote controller
  1. Button A: Speed Up
  2. Button B: Slow Down
  3. Button C: Automatic Mode (Random Speeds)
  4. Button D: Start/Stop Button
- E. Speed Control
  1. This machine has 7 different speed variations. The lowest speed is about 1 thrust per second. The highest speed is about 6 thrust per second.
  2. Press the A Button to make the thrust go faster.
  3. Press the B Button to make the thrust go slower
- F. This machine is designed for use many different positions, be cautious to be in a stable and comfortable position during use to prevent injury.

