
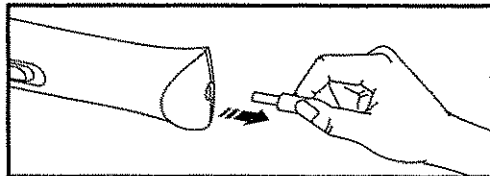


INFORMATION FOR USE

Feel better effortlessly with your super powerful rechargeable massager. Be sure to pack your cordless, lightweight massager and charger – as it is a great traveling companion. The flexible silicone head offers a hygienic, comfortable contact with powerful vibrations in two speeds. The massager was designed to enhance well being and stimulate the senses.

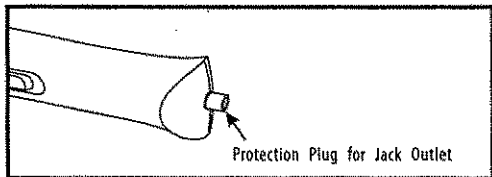

Your massager has a "jack outlet" for connecting the adaptor. This outlet is protected from dirt and foreign particles with a special plug. To charge your massager you need to remove the plug. Simply pull it out gently. You can replace the plug for cleanliness and safety.

When you purchase your massager, it will be charged, but only slightly. Use your massager until the charge runs out. Then plug it in, and charge for 6-8 hours. If you follow the instructions below, your vibrator can be used for about 500 cumulative hours.

ALWAYS

- Unplug the appliance immediately after use.
- Unplug the appliance if you are leaving it unattended.
- Turn the switch to the "off" position, (before unplugging), so the motor ceases.

CAUTION

- DO NOT charge more than 12 hours, as this might reduce the number of times it can be recharged.
- DO NOT use the appliance while bathing, showering, or washing.
- DO NOT touch the appliance if it falls into water, unplug it first.
- DO NOT cover or wrap the appliance with a pillow, towel, blanket, or other covering; this may cause excessive heating, fire, or injury.
- DO NOT use the appliance for more than 30 minutes at a time if the massage head or any other part feels excessively hot to the touch. Some warmth is normal.