

# Assembling the Stockade with Fucking Rod

## Tools Required:

9/16 inch Crescent or socket wrench

## Parts Included:


- A: Main Body Assembly
- B1: Wrist Assembly
- B2: Ankle Assembly
- C: Neck Stockade
- D: Fucking Rod Support Arm
- F: Fucking Rod Attachment



The Versatile Insertable Toy Attachment allows you to attach any insertable toy with a flared base. By unscrewing the side screws and removing the base plate, you can place your toy on the attachment. Secure your toy by sliding the plate over the toy and securing with the side screws.


## Assembly Instructions

1. Lay part A: Main Body Assembly on the floor with the tightening knob face up.
2. Attach B1: Wrist assembly to the end farthest away from the tightening knob. Use the bolt on the end of the A: Main Assembly Body.
3. Attach B2: Ankle Assembly to the A: Main Body Assembly closer to the Tightening Knob.
4. Loosen the Knob on the A: Main Body Assembly and slide out the bar until the required length is reached.
5. Attach C: Neck Stockade to A: Main Body Assembly. This is accomplished by using the three holes on the side of the Main Body Assembly (A) closest to B1 (Wrist Assembly). The Neck Stockade can

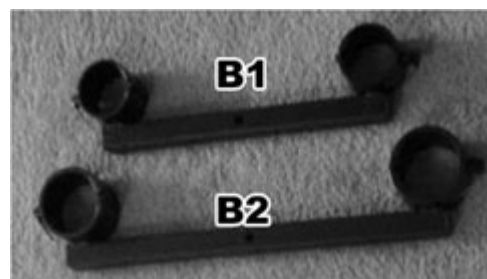

be attached to any of the three holes. Choose the appropriate one for the comfort level desired for your submissive. The Neck Stockade can also be adjusted for height using the tightening knob provided.

6. Attach D: The Fucking Rod Support to the A: Main Body Assembly by using the hole on the end of the Main Body Assembly. Tightly screw the Fucking Rod Support into the hole.
7. Attach F: The Fucking Rod Attachment to D: the Fucking Rod Support via the tightening knob. Unscrew the tightening knob and slide the arm down to the hole closest to the height desired. The lever on the opposite side allows you to release the tension on the bar, so that you can slide it in and out in a fucking motion.

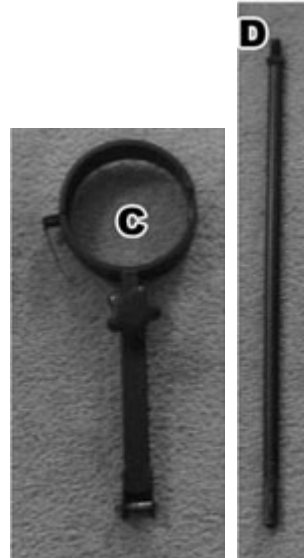

8. Enjoy your new Stockade and Fucking Rod.

