

1.A

2.A

Figure 1  
Cable tie

Figure 2 Allen Wrench

Figure 3  
Screw

Figure 4  
Adhesive  
sticker



Figure 2

1.A


1) Use the Fig. 2. to unscrew 1.A first top cable tie



Figure 2

2.A

2) Use Fig. 2 to unscrew 2.A second bottom cable tie

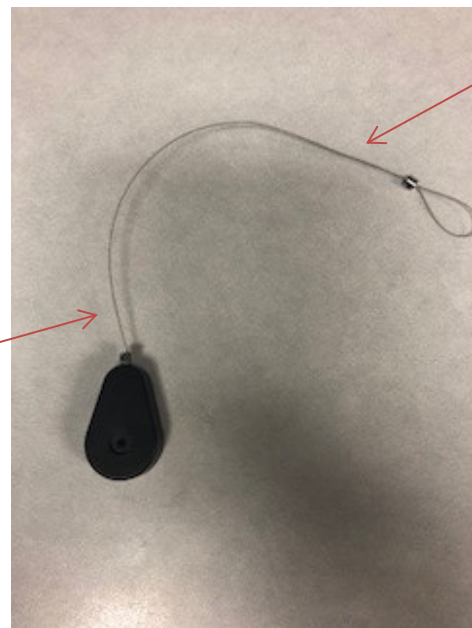

3) Create enough distance from the bottom cable tie to the top



- 4) Use first part of the wire to wrap it around the shaft of the item, insert through the top cable tie and use Fig. 2 to tighten



- 5) Place Fig. 4 to any solid base where you want Fig. 1 to stay in place



- 6) Display item on stand or slat wall Fig. 3 can be used to screw the remote in place to slat wall